



# MoodMaker® MM4-6

Product order codes:

MoodMaker Scene Set-Up Unit MMSSU

Scene Select Plate: MMSS

## To programme MoodMaker

### 1 To make set up easier, set fade time to 1 sec.

Turn finger-turn adjuster **A** fully anti-clockwise to fastest setting: 1 sec. Fade time can be re-adjusted later from 1 – 300 secs.

### 2 Select the mood to be programmed

EITHER: select scene using room plate,  
OR: use SW1 and SW2 **F** in the Set-up Unit.  
To change the mood (up) press SW1 and hold down, then press SW2 and hold down; release SW1 first, then SW2. To change the moods (down) press SW2 first and release SW1 last.

A red LED **B** will indicate the option selected.

### 3 Set channel brightness levels

Use the six finger-turn adjusters **C** below the selected mood LED, to set the brightness for each channel in turn.

Once the adjustments are made the levels set are permanent unless manually readjusted.

### 4 Set fade times between scenes. Use:

- i) Adjuster **A** to set fade times between scenes. 1 – 300 secs.
- ii) Adjuster **D** to set fade time to Off. 1 – 300 secs.
- iii) Adjuster **E** to set fade time to Full brightness. 1 – 300 secs.


### 5 Set LED brightness shown on Scene Select Plate(s)

Use **active** adjuster **G** to set brightness on the room plate LEDs during scene selection.

Use **standby** adjuster **H** to set continuous brightness shown on the room plate LEDs after **active** brightness has faded away (after a few seconds). This eliminates any distracting glare.

### Mains wiring connections

Mains wiring connections are made to the base board (not shown) of the Scene Set-up Unit. For overall switching capacity and individual channel switching capacity please see Technical Data Sheet and Wiring Instruction Data Sheet.

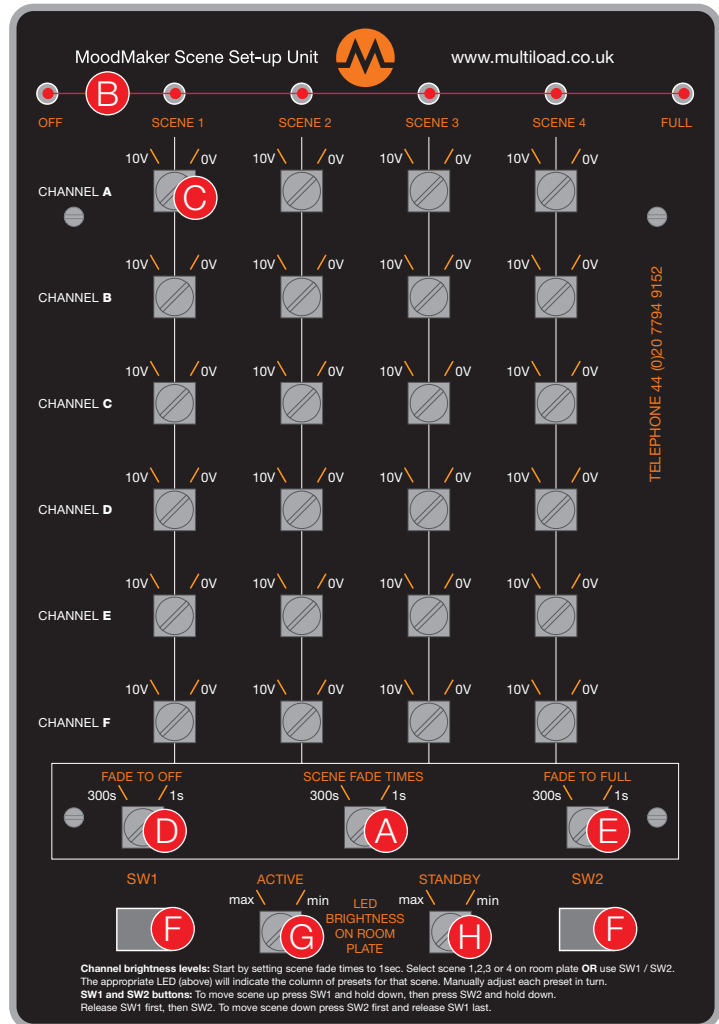

MoodMaker Scene Set-Up Unit MMSSU



Scene Select Plate: MMES-6